HONDA **INSTALLATION INSTRUCTIONS**	Accessory **SIDE UNDERSPOILERS**	Application **1999 ACCORD 2-DOOR**	Publications No. **All 20045** Issue Date **OCT 1998**

PARTS LIST

Left side underspoiler

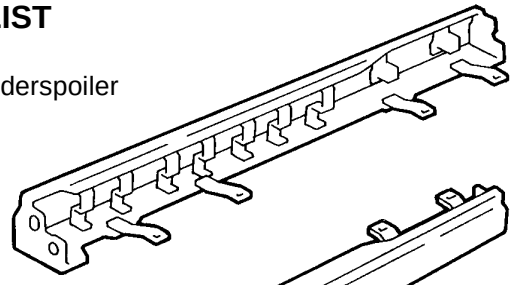

Right side underspoiler

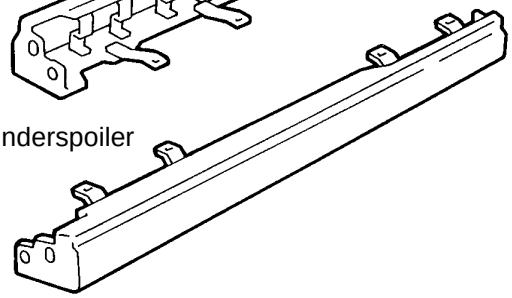

8 Expansion clips

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Piece of cardboard

INSTALLATION

NOTE:

- Be especially careful not to damage the body finish when installing the side underspoiler.
- Place the side underspoilers on a blanket or cardboard after removing them from the carton.
- In these instructions, the illustrations show the left side underspoiler being installed. The same procedure applies to installing the right side underspoiler.
- Splash guards cannot be installed with the side underspoilers.

1. Remove the two self-tapping screws securing the inner fender to the front fender. Remove the four expansion clips from the underside of the side sill panel. If necessary, remove the splash guards (three screws).

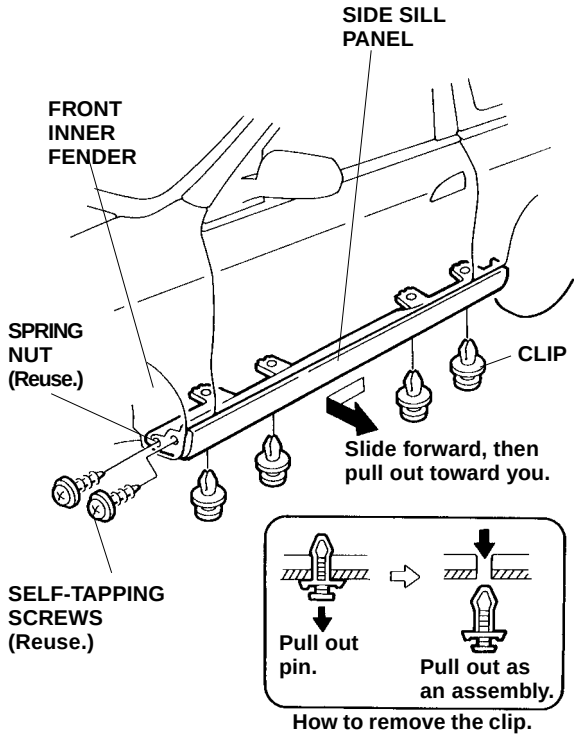

How to remove the clip.

2. Remove the side sill panel by sliding the panel toward the front, then pulling it out toward you. Set aside the side sill panel and the expansion clips; they will not be used.
3. Remove and retain the spring nut from the front of the side sill panel.

© 1998 American Honda Motor Co., Inc - All Rights Reserved.

4. Remove the 12 clips from the body flange. Turn the clips 45° to remove them.

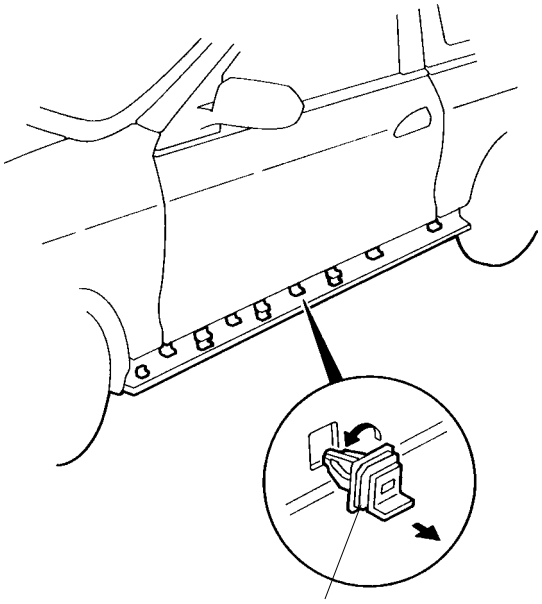

CLIP (Turn 45° to remove.)

5. Slide the 12 clips you removed onto the brackets on the inside of the left side spoiler, and slide the spring nut onto the front of the left side underspoiler.

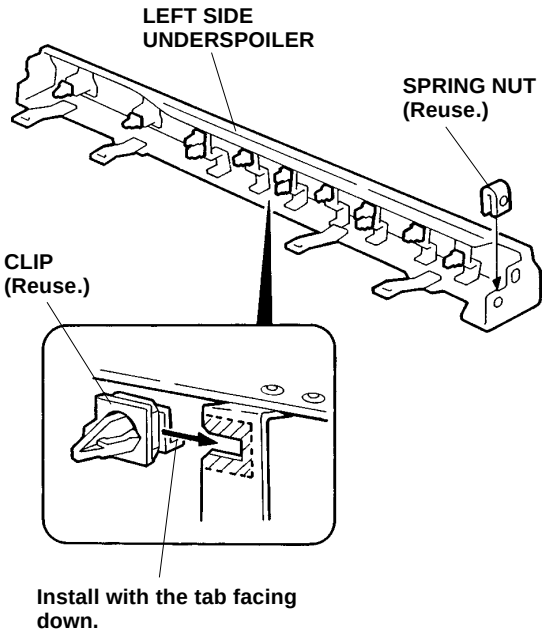

6. Clean and wax the area to be covered with a high-quality paste wax.

7. Open the door, and install the left side underspoiler by pushing the 12 clips into the square holes in the body flange.

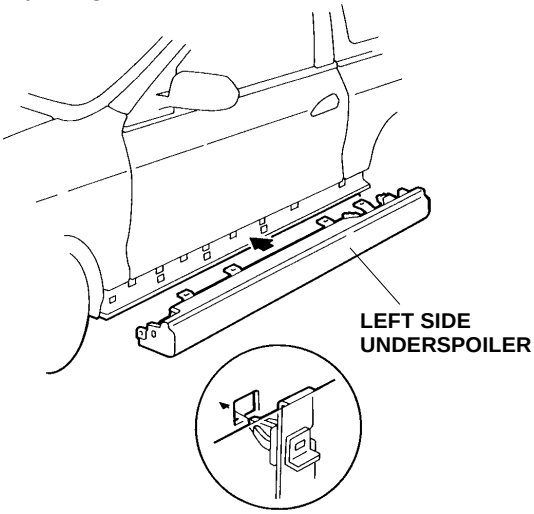

8. Further secure the left side underspoiler to the body flange by inserting four expansion clips (supplied) into the holes in the four brackets on the underspoiler through the body.

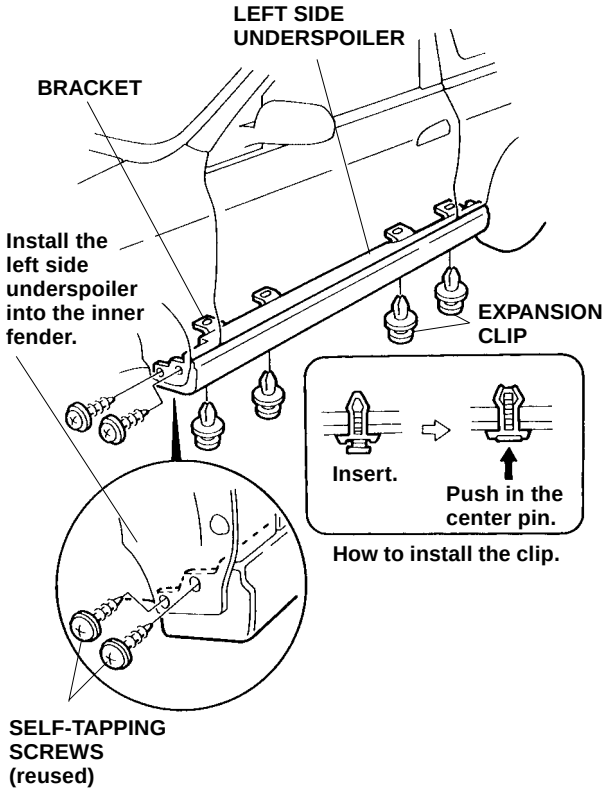

9. Secure the left side underspoiler to the left inner fender using the two self-tapping screws you removed in step 1.

10. Repeat steps 1 through 9 to install the right side underspoiler.

All 20045 (9810)

© 1998 American Honda Motor Co., Inc - All Rights Reserved.